 



70ET Fireproof Safe User Manual

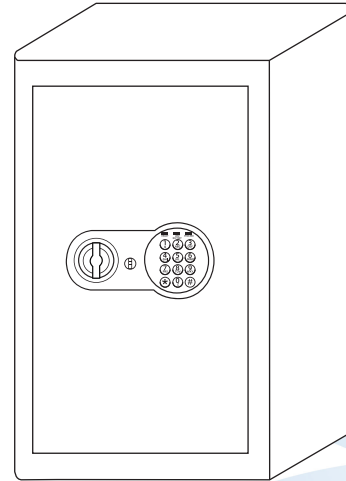

Scan QR code to contact us
Visit our website for exclusive video tutorials and resources.

70ET Fireproof Safe

 Multi-layer Composite Fireproof Structure

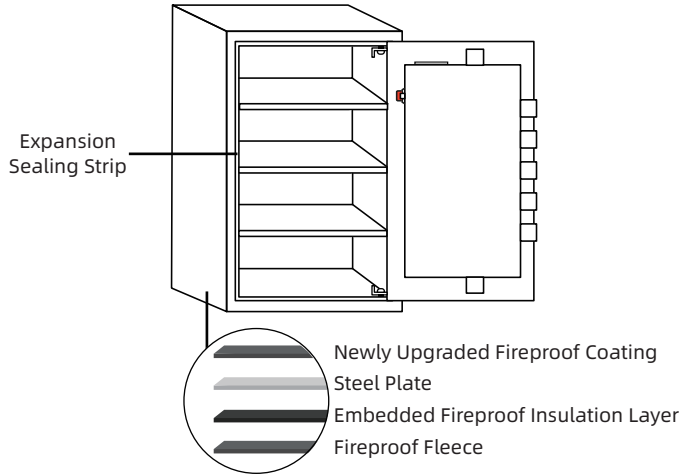

Verified Fire Resistance

This product has passed multiple [fire resistance tests](#), with a certified rating of over 30 minutes. We are committed to using high-quality materials and precision engineering to ensure every safe meets its design standards.



Scan to watch the fire resistance test video.



Scan to activate your 3-year warranty.

ET Series Safes Overview

Product Name	Picture	Dimensions(in)	Removable Shelves	Fireproof
20ET		12*7.8*7.8	0	✗
25ET		13.7*9.8*9.8	1	✗
45ET		13.7*12.1*17.6	2	✗
60ET		14.8*12.1*23.4	3	✗
70ET		16.4*14*27.3	3	✓

Additional Features

Alarm & Auto-Lock

If the wrong code is entered 3 times in a row, the keyboard will lock for 20 seconds and the alarm will sound for 20 seconds.

If the wrong code is entered 6 times consecutively, the keypad will lock for 5 minutes and the alarm will sound for 5 minutes.



The keypad will be disabled while the alarm is sounding.

To stop the alarm, open the safe using the emergency key and disconnect power by removing the battery.

Silent Mode

To avoid disturbing others, you can enable Silent Mode to disable the keypad sounds.



To activate Silent Mode:
Press *633



To deactivate Silent Mode:
Press *66

Accessories & Parts Checklist

Please verify all accessories and parts against the following table before use. If anything is missing, please contact us. We will respond within 24 hours.


Item	Picture	Qty
Safe Box		1
Key		2
External Battery Box		1
Fireproof Bag		1
Manual		1

Usage Instructions

• First Time Opening the Safe

1. Remove the lid to reveal the keyhole.
2. Take the provided key and insert it into the keyhole.
3. Turn the key to the left, then rotate the knob clockwise and pull outward—the door will open.

 
Note: Do not store the keys inside the safe.

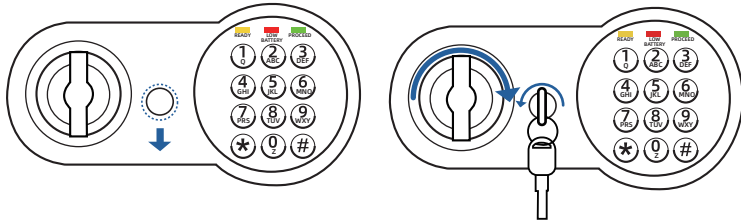

• Installing Batteries

1. Open the battery compartment on the back of the door.
2. Insert **4 AA** batteries, observing the correct polarity (**batteries not included**).
3. Close the compartment cover.

 Note: Replace all batteries when the low-battery indicator lights up.

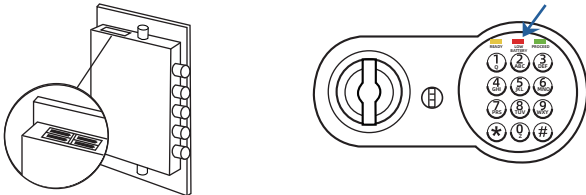

• Setting Your Personal Password

Initial Password: "159#"

1. Press the reset button to initiate password change.
2. Enter your new code (3-8 digits), and press "#" to save.
3. Re-enter the new code and press "#" again to confirm.
4. Turn the knob clockwise to open the door and complete the setup.



• External Battery Case Unlocking

When the lock's batteries are dead and the key is lost, you can unlock it using an external power source:

1. Take the external battery case and load it with four AA batteries.
2. Insert the case into the small hole at the bottom of the lock to power it on.

